

A Different Class Of Display

www.agneovo.com

SX-Series Security LCD Display
User Manual

Table of Contents

Precautions	2
Warning on installation	2
Warning on power connection	2
Warning on tilt	3
Warning on Maintenance	3
Warning on transportation	3
Getting Started	4
Package Contents	4
Identify the Parts and Controls	5
How to Use the On-Screen Display Menu	7
Setup	8
Software Configuration	9
Customizing Your Monitor	10
Adjusting Your LCD Panel	10
Selecting OSD Features	10
OSD Menus	11
Warning Messages and Troubleshooting	17
Warning Messages	17
Troubleshooting	18
Technical Specifications	19
Specifications	19
Regulation	21
FCC compliance	21
WEEE	22
Hg	22

Precautions

Warning on installation

- Do not cover or block the ventilation holes in the case.
- Do not install the monitor near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Optional Video adaptor installation
 - Turn off the power switch and unplug the monitor before installation to avoid electric shock or damage.
 - Install the optional video adaptor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
 - Please use BNC output cable --- RG-59/U 75Ω coaxial cable (just like the BNC input cable provided in the accessory box).


Warning on power connection

- Use an appropriate power cord for your local power supply.
- The outlet should be installed near the monitor and be easily accessible.
- Do not allow anything to rest on the power cord.
- Disconnect the power plug from the power outlet under following conditions:
 - If you will not use it for an indefinite period time.
 - When the power cord or plug is damaged or frayed.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicate a need for service.


Warning on tilt

- Use the monitor's tilt capability to adjust its vertical orientation to an appropriate position. Grasp the top corners of the monitor with both hands and tilt to the desired angle.

SX-19 / SX-17

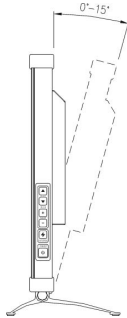

SX-15

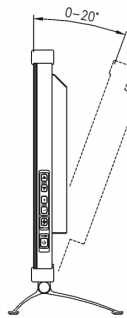

Warning on Maintenance

- Clean the cabinet, glass, and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a pen or screwdriver. This type of contact may result in a scratched glass.
- Do not insert sharp objects or spill liquid into the monitor through ventilation holes. They may cause accident fire, electric shock or failure.
- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials or other risks.

Warning on transportation


- When you transport this monitor for repair or shipment, use the original carton and packing materials.

Getting Started


Package Contents

Before using this monitor, check the following items are included in your carton box:


- Monitor (*1)

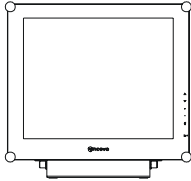

- Power adapter (*1)

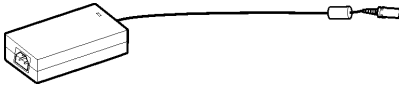

- Power cord (*1)

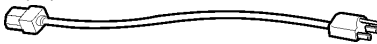

- D-sub 15-pin signal cable (*1)



- Digital DVI signal cable (*1)



- BNC cable (*1,)




- CD-ROM (containing Windows information file and user's manual)




- Quick Guide



Identify the Parts and Controls

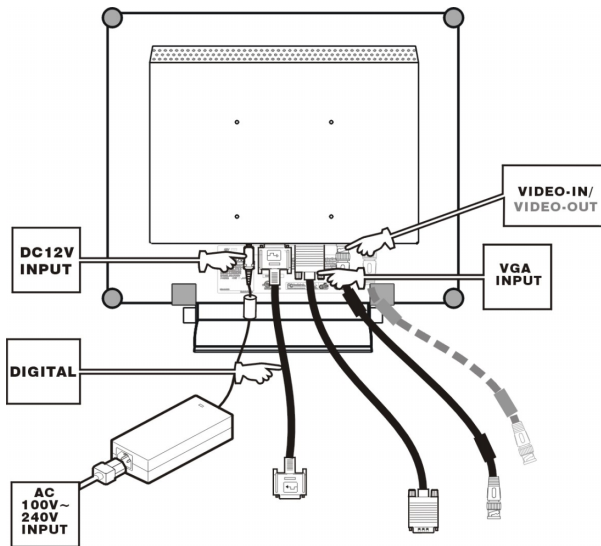

- DC +12V Power inlet
Provides +12V DC power to the monitor.
- Digital
DVI-D connector for digital signal input
- Video-In / Video-Out
BNC connector for Video signal.
- VGA-Input
D-sub 15-pin connector for VGA signal.

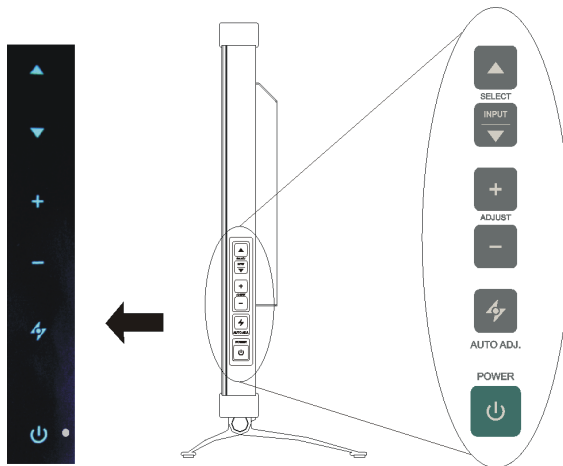

▲ Up Button

1. Activates the On-Screen Display menu.
2. While the On-Screen Display menu appears, press ▲ to move the selected item clockwise or onward

▼ INPUT / Down Button

1. While the On-Screen Display menu appears, press ▼ to move the selected item counterclockwise or backward
2. Use as the **Input Select Hot Key*** when the On-Screen Display menu is inactivated

INPUT Input Select Hot Key*

1. When the On-Screen Display menu is inactivated, use ▼ as the Input Select Hot Key
Press ▼ to choose the desired input signal: D-Sub, DVI and CVBS. The option will toggle on the top right hand corner of the display
2. Pressing ▲ and ▼ buttons at the same time for 5 seconds can switch between auto and manual input select

+ Increase Button



1. When the On-Screen Display menu is activated, press + to confirm / enter the selected item
2. When the On-Screen Display menu is activated, press + to increase the adjustable value of the selected item

— Decrease Button

1. When the On-Screen Display menu is activated, press — to confirm / enter the selected item
2. When the On-Screen Display menu is activated, press — to decrease the adjustable value of the selected item




Auto Button

1. Optimal Settings (available only when D-Sub input is connected):
Press  button to adjust the picture position and performance automatically when D-Sub input is connected. You are recommended to press the button the first time you use the monitor or every time you change the resolution and/or refresh rate of the input signal.
2. When the On-Screen Display menu is activated, press  button to exit the menu at any time

Anti-Burn-in™

3. Image Sticking Prevention On / Off:

Press  button for **5 seconds** to turn on or off “**Image Sticking Prevention**” function to prevent the panel from burn-in problem, which reducing the panel's life.



Power Switch

Turns the monitor on or off.



LED Indicator

Indicates the monitor's operational mode; green for regular mode

How to Use the On-Screen Display Menu



Step 1. Call Out the On-Screen Display Menu

Press  to activate On-Screen Display menu

Step 2. Adjust the Settings

Press  to move the selected item clockwise or onward

Press  to move the selected item counterclockwise or backward

Press  ,  to confirm / enter the selected items

Press  to increase the adjustable value of the selected item

Press  to decrease the adjustable value of the selected item


Step 3. Exit the On-Screen Display Menu

Press  to exit the On-Screen Display menu at any time

Setup

Please follow the following instructions to setup monitor.


Step 1: Remove all packing materials and wrapping from the monitor and then tear down the plastic dust cover from the screen surface.

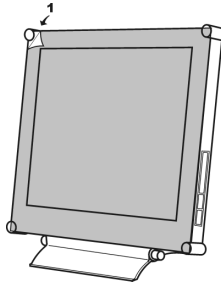

Step 2: With the computer or video equipment turned off, connect the enclosed VGA signal cable.


- Connecting to an IBM or IBM compatible computer

IBM PC/AT or
compatible
computer

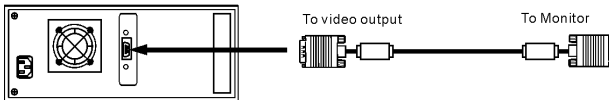


- Connecting to a video equipment with digital source

IBM PC/AT or
compatible
computer

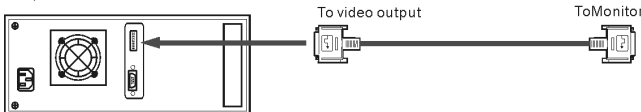



- Connecting to a video source with the BNC cable

With the video source being switched off, connect the BNC cable to the "Input" port at rear of the monitor and video source.

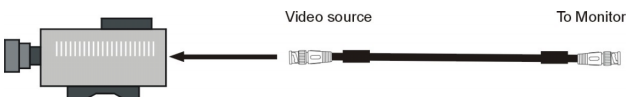

Step 3: With the monitor turned off, connect the monitor end power plug of adaptor to the power jack of the monitor. Then connect the power cord to the adaptor and the power plug to the power source.

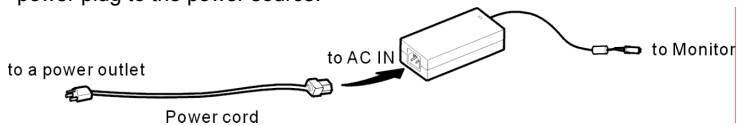

Step 4: Turn on your computer or video equipment. Press  power switch to turn on monitor.

Step 5: For best performance.(If the monitor is connected to a video equipment such as DVD or VCR player, please skip this step.)

For SX-17 / SX-19 LCD monitor, it will have the best performance at resolution 1280 x 1024. Ensure that your computer display is set at 1280 x 1024 pixels and 60Hz. Press the AUTO button. The monitor will optimize the display automatically.

For SX-15 LCD monitor, it will have the best performance at resolution 1024 x 768. Ensure that your computer display is set at 1024 x 768 pixels and 60Hz. Press the AUTO button. The monitor will optimizes the display automatically

Software Configuration

Installing the Microsoft Windows data file

You can find the Microsoft Windows data file (also called the driver program) on the included AG Neovo CD. To ensure smooth operation after initial installation, you can refer to the installation guide, which can also be found on the CD.


Customizing Your Monitor

Adjusting Your LCD Panel


In the OSD menu, you will find all kinds of features to help you adjust your LCD panel to the optimal performance.



Selecting OSD Features

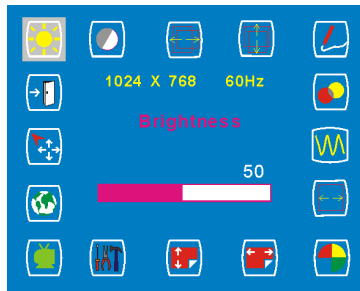1. Push ▲, + or — button to call out the OSD menu. The sixteen OSD icons are represented in the following menu.

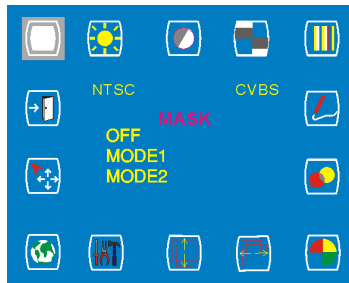

2. In case of using video adapter and selecting CVBS, the OSD menu is shown below.




3. In case of no OSD menu, the icon  can do auto adjustment function. (Simply push the AUTO button)
4. In case of having OSD menu, the icon  can do exit function.

OSD Menus


VGA-Input (D-Sub)

Important! Though manual adjustment of the LCD panel is available, we strongly recommend you to use the auto adjustment function of the panel. It will automatically tune your LCD panel to the optimal performance. Simply push the AUTO button to enable the auto adjustment function. Additionally, we recommend you to use the auto adjustment function every time after you have changed the resolution or frequency of your display.


Brightness Adjustment

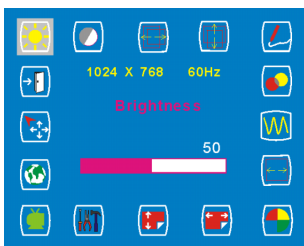


Contrast Adjustment

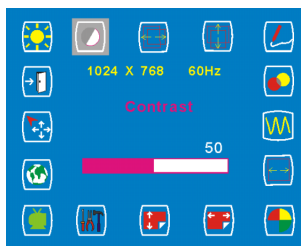


Horizontal Position Adjustment

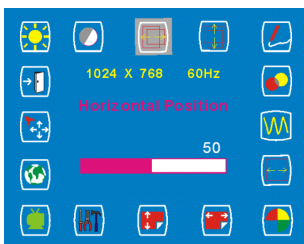

Vertical Position Adjustment

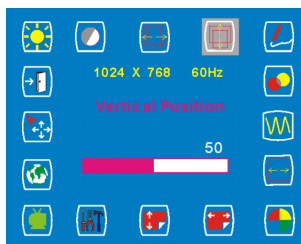

Sharpness Adjustment

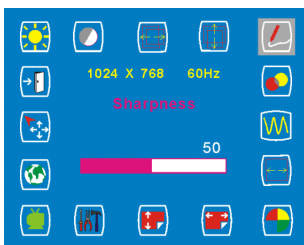


OSD Transparency Adjustment




Important! Sharpness adjustment is not available when:
The resolution is set as 1280*1024 (for SX-19/SX-17) or 1024*768 (for SX-15)


Phase Adjustment

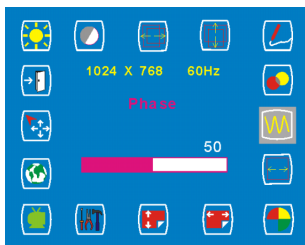


Clock Adjustment

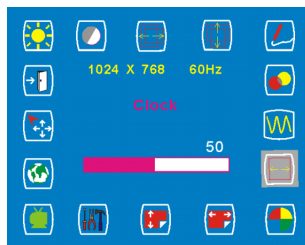


Color Temperature Selection *

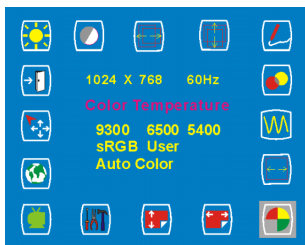


Horizontal OSD Position Adjustment

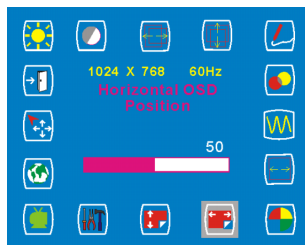

Vertical OSD Position Adjustment

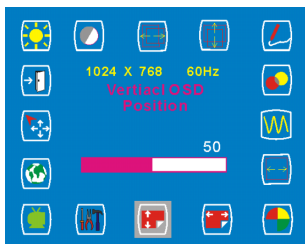


Tools Adjustment **

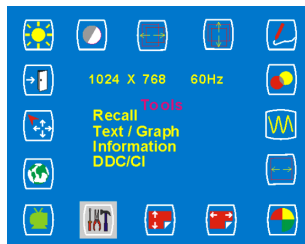

Language Selection



Auto and Input Select Selection

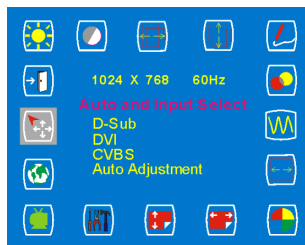

* The color temperature of RGB can be adjusted in case of entering " User "sub menu.


** Suggest the user select" Text "sub menu in case of the resolution being 720x350 or 720x400.

Suggest the user to use" Recall "icon, if the user doesn't satisfy with the adjustment.


[illegible]

Important! When DVI-Input is selected, the following adjustments are not available: horizontal position adjustment, vertical position adjustment, sharpness, phase adjustment and clock adjustment.


Horizontal OSD Position Adjustment

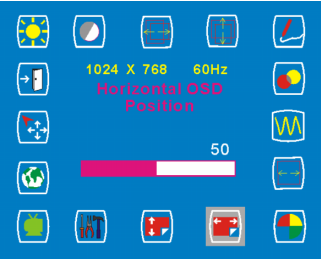

Vertical OSD Position Adjustment

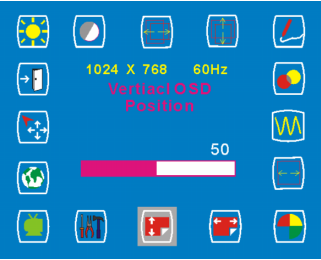


Tools Selection *

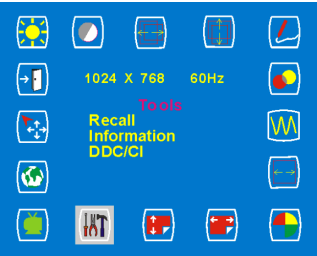

Language Selection



Auto and Input Select Selection

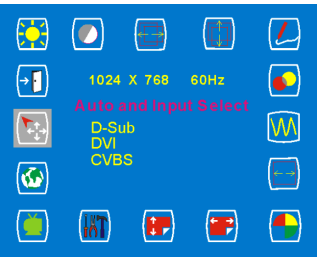


Exit Selection




* Suggest the user to use " Recall "icon, if the user doesn't satisfy with the adjustment.

CVBS Input


MASK*

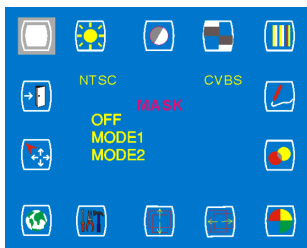


Brightness Adjustment

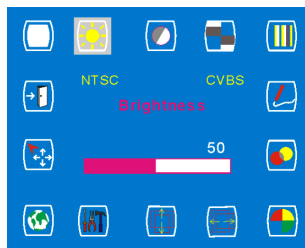


Contrast Adjustment

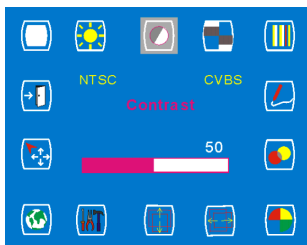


Color Adjustment

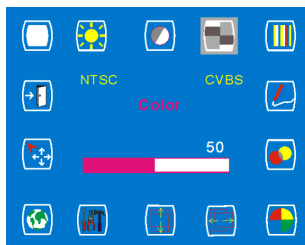


Hue Adjustment

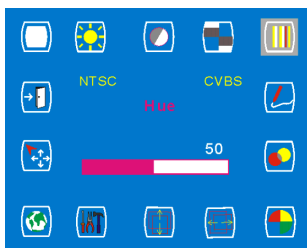


Sharpness Adjustment

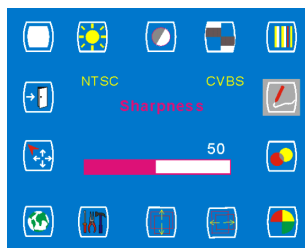

OSD Transparency Adjustment

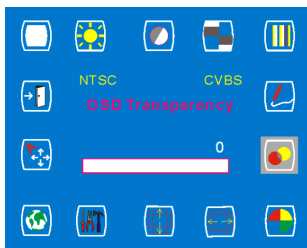


Color Temperature Selection

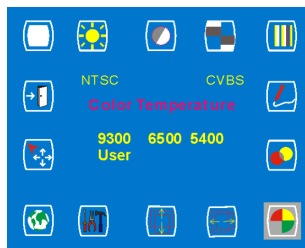


- * OFF : Default to turn "Mask" function off to present native image reproduction
- MODE1 : Activate "Mask" to keep noise blanking and support VCR Forward / Backward
- MODE2 : Activated "Mask" to keep noise blanking, but not support VCR Forward / Backward


Horizontal Position Adjustment

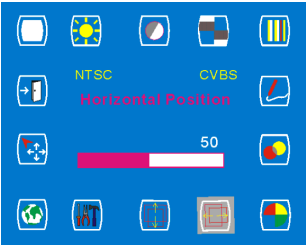

Vertical Position Adjustment

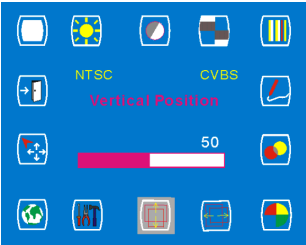


Tools Selection

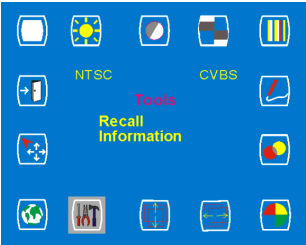

Language Selection



Auto and Input Select Selection

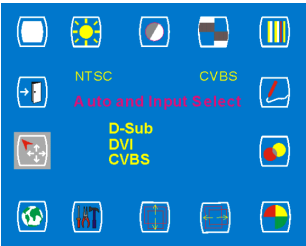






Exit Selection






Warning Messages and Troubleshooting

Warning Messages

If the message appears on the screen	Check the items
CAN NOT DISPLAY THIS INPUT SIGNAL	<p>The input signal is not acceptable by the monitor.</p> <ul style="list-style-type: none"> • Please check the video resolution and frequency range is within that specified for the monitor. • Please refer to the “Technical Specifications” section of this user manual for details.
NO SIGNAL INPUT	<p>No signal inputs are detected from any one of the input connectors.</p> <p>Check that the power switch of your computer or video source is in the “ON” position.</p> <ul style="list-style-type: none"> • Check that the signal cable is connected properly. • Ensure that no pins are bent or pushed in the connectors of signal cable.
WAIT FOR AUTOMATIC ADJUSTMENT	<p>The monitor is detecting the input signal and then adjusting automatically the monitor parameters accordantly.</p> <ul style="list-style-type: none"> • It takes around 5 seconds to finish the whole process. • You are recommended to run auto adjustment by pressing  button every time you changed the resolution or refresh rate.
MAIN CONTROL MENU LOCKED/ UNLOCKED	<p>The main control menu (On-Screen Display menu) is locked to avoid unwanted adjustment.</p> <ul style="list-style-type: none"> • Press , ,  buttons together for 5 seconds to unlock the main control menu.
IMAGE STICKING PREVENTION ON / IMAGE STICKING PREVENTION OFF	<p>The panel of monitor will be under prevented from burn-in problem once Anti-Burn-in™ is activated.</p> <ul style="list-style-type: none"> • Press  button for 5 seconds to turn on or off “Image Sticking Prevention” function

Troubleshooting

Symptom	Check Items
<ul style="list-style-type: none"> No picture Power LED is off. 	<ul style="list-style-type: none"> Check that the power switch of monitor is turned on. Check that the power adapter is properly connected to the monitor. Check that the power cord is properly connected to the power adapter. Check that the power cord is properly connected to power outlet. Check there is electrical power coming from the power outlet. Use another device to check for power.
<ul style="list-style-type: none"> The texts are not solid 	<ul style="list-style-type: none"> Change the resolution of the video signal to 1280*1024 (for 19" and 17") or 1024*768 (for 15"). Press  button to run the automatic adjustment. Adjust Clock and Phase in the OSD menu to fine tune. (Please refer to the "Customizing Your Monitor" section of this user manual for details.)
<ul style="list-style-type: none"> Screen image is not centered properly. Some lines are missing 	<ul style="list-style-type: none"> Press  button to run the automatic adjustment. Adjust H. Position and V. Position to fine tune. (Please refer to the "Customizing Your Monitor" section of this user manual for details.)
<ul style="list-style-type: none"> There are red, green, blue or black tiny dots on the screen. 	<ul style="list-style-type: none"> The TFT LCD panel is made of millions of small transistors. And each defect transistor will cause a missing red, green, or blue dot. It's guarantees maximum 3 missing dots in every single monitor. It's around the industrial standard.
<ul style="list-style-type: none"> Due to asynchronous Video Sync, there are noise appearing when video source changes 	<ul style="list-style-type: none"> To avoid noise appearing, you are suggested to turn "Mask" during video input sources change.
<ul style="list-style-type: none"> The screen, shown Image Sticking Prevention ON on the right top side, is shifting slightly and want to stop it 	<ul style="list-style-type: none"> Press  button for 5 seconds to turn off "Image Sticking Prevention" function that is designed for preventing the panel from burn-in problem

Technical Specifications

Specifications

SX-19

Electrical characteristics	
Screen size	19.0" (48.2 cm) diagonal
Pixel format	1280 x 1024 vertical stripe
Horizontal frequency	30kHz ~ 80kHz
Vertical frequency	56Hz ~ 75Hz
Connections	Power: 3-Pin AC Plug
Physical characteristics	
Weight	Net: 7.4Kg (16.3 lb)
Tilt angle	0° ~ 15°

SX-17

Electrical characteristics	
Screen size	17.0" (43.1 mm) diagonal
Pixel format	1280 x 1024 vertical stripe
Horizontal frequency	30kHz ~ 80kHz
Vertical frequency	56Hz ~ 75Hz
Connections	Power: 3-Pin AC Plug
Physical characteristics	
Weight	Net: 6.4Kg (14.1 lb)
Tilt angle	0° ~ 15°

SX-15

Electrical characteristics

Screen size	15.0" (38.1 cm) diagonal
Pixel format	1024 x 768 vertical stripe
Horizontal frequency	30kHz – 60kHz
Vertical frequency	56Hz – 75Hz
Connections	Power: 3-Pin AC Plug

Physical characteristics

Weight	Net: 4.7 Kg (10.34 lb)
Tilt angle	0° - 20°

FCC compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any unauthorized modification to this equipment could result in the revocation of the authorization to operate the equipment and void the product warranty.

WEEE

Information for users applicable in European Union countries



The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that this is your responsibility to dispose electronic equipment at recycling centers so as to help conserve natural resources. Each country in the European Union should have its collection centers for electrical and electronic equipment recycling. For information about your recycling drop off area, please contact your local related electrical and electronic equipment waste management authority or the retailer where you bought the product.

Hg

Lamp Disposal



LAMP(S) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the electronic industries alliance at www.eiae.org for lamp specific disposal information check www.lamprecycle.org.

Vermont Hg directive

Title 10: Conservation and Development

Chapter 164: COMPREHENSIVE MERCURY MANAGEMENT

§ 7106. Labeling of mercury-added products

Contains Mercury, Dispose of Properly

